Note: - Maximum Post spacing is 3000mm.
- Installer must manage working at heights in accordance with state legislation under the OH+S act.

Rails

2D Post (CR0200)

V-Clamp (CR0020)

Bottom Post (CR0180)

Support Bar

G-Clamp (CR0010)

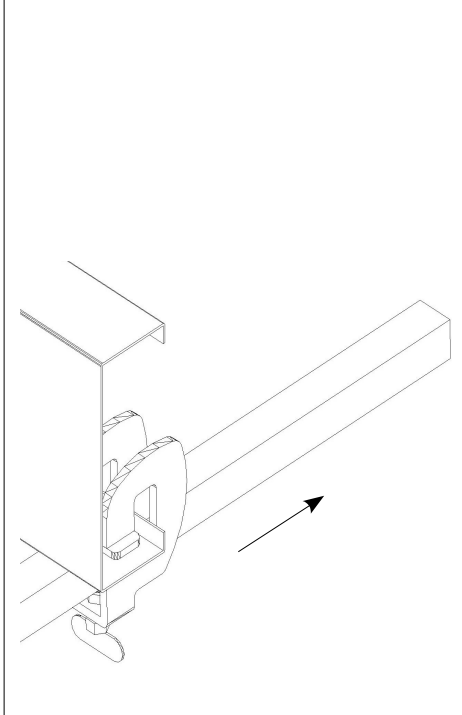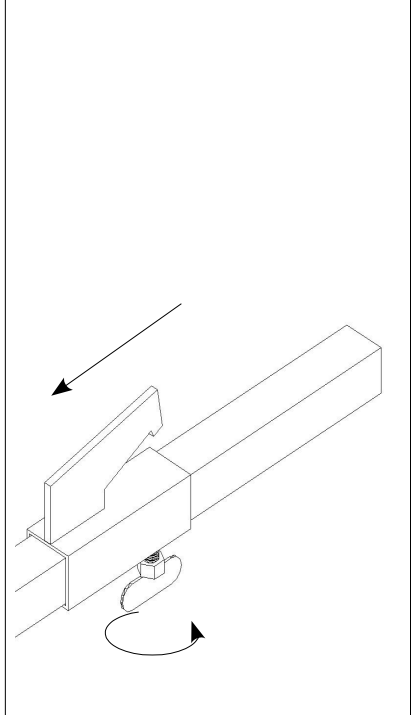## Step-1
Position G-Clamp On the Purlin.
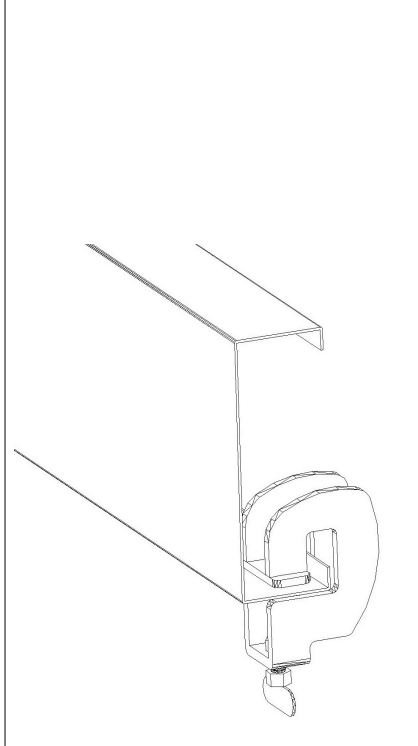
Step-2
Slide Support Bar through the G-Clamp.

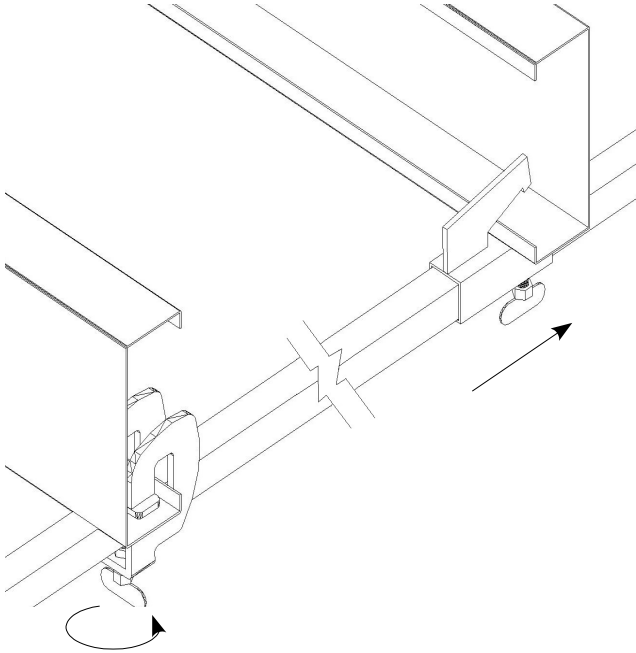## Step-3
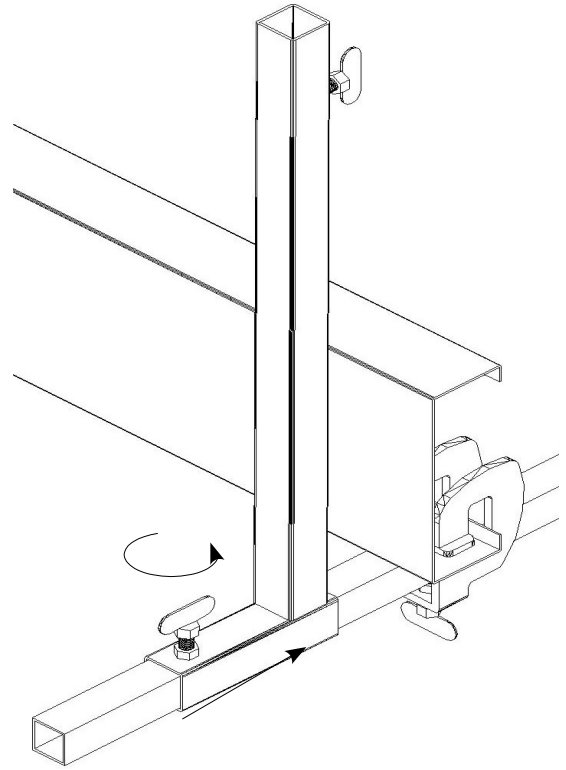Slide V-Clamp on the Support Bar and tighten the wing bolt.

Step-4

Slide the suppot bar through G-Clamp and locate V-Clamp on 2nd purlin and tighten wing bolt on G-Clamp.
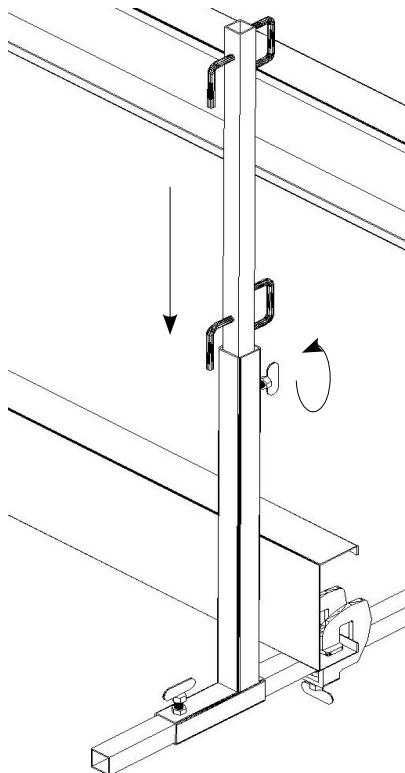

Step-5

Slide the Bottom Post on support bar and tighten the wing bolt.

Step-6

Slide 2D Post into the Bottom Post and tighten wing bolt. Make sure " D's " are facing working area.

Step-7

Slide the rails into 2D Post and tighten the 'L' Bolts.